


## activa 240

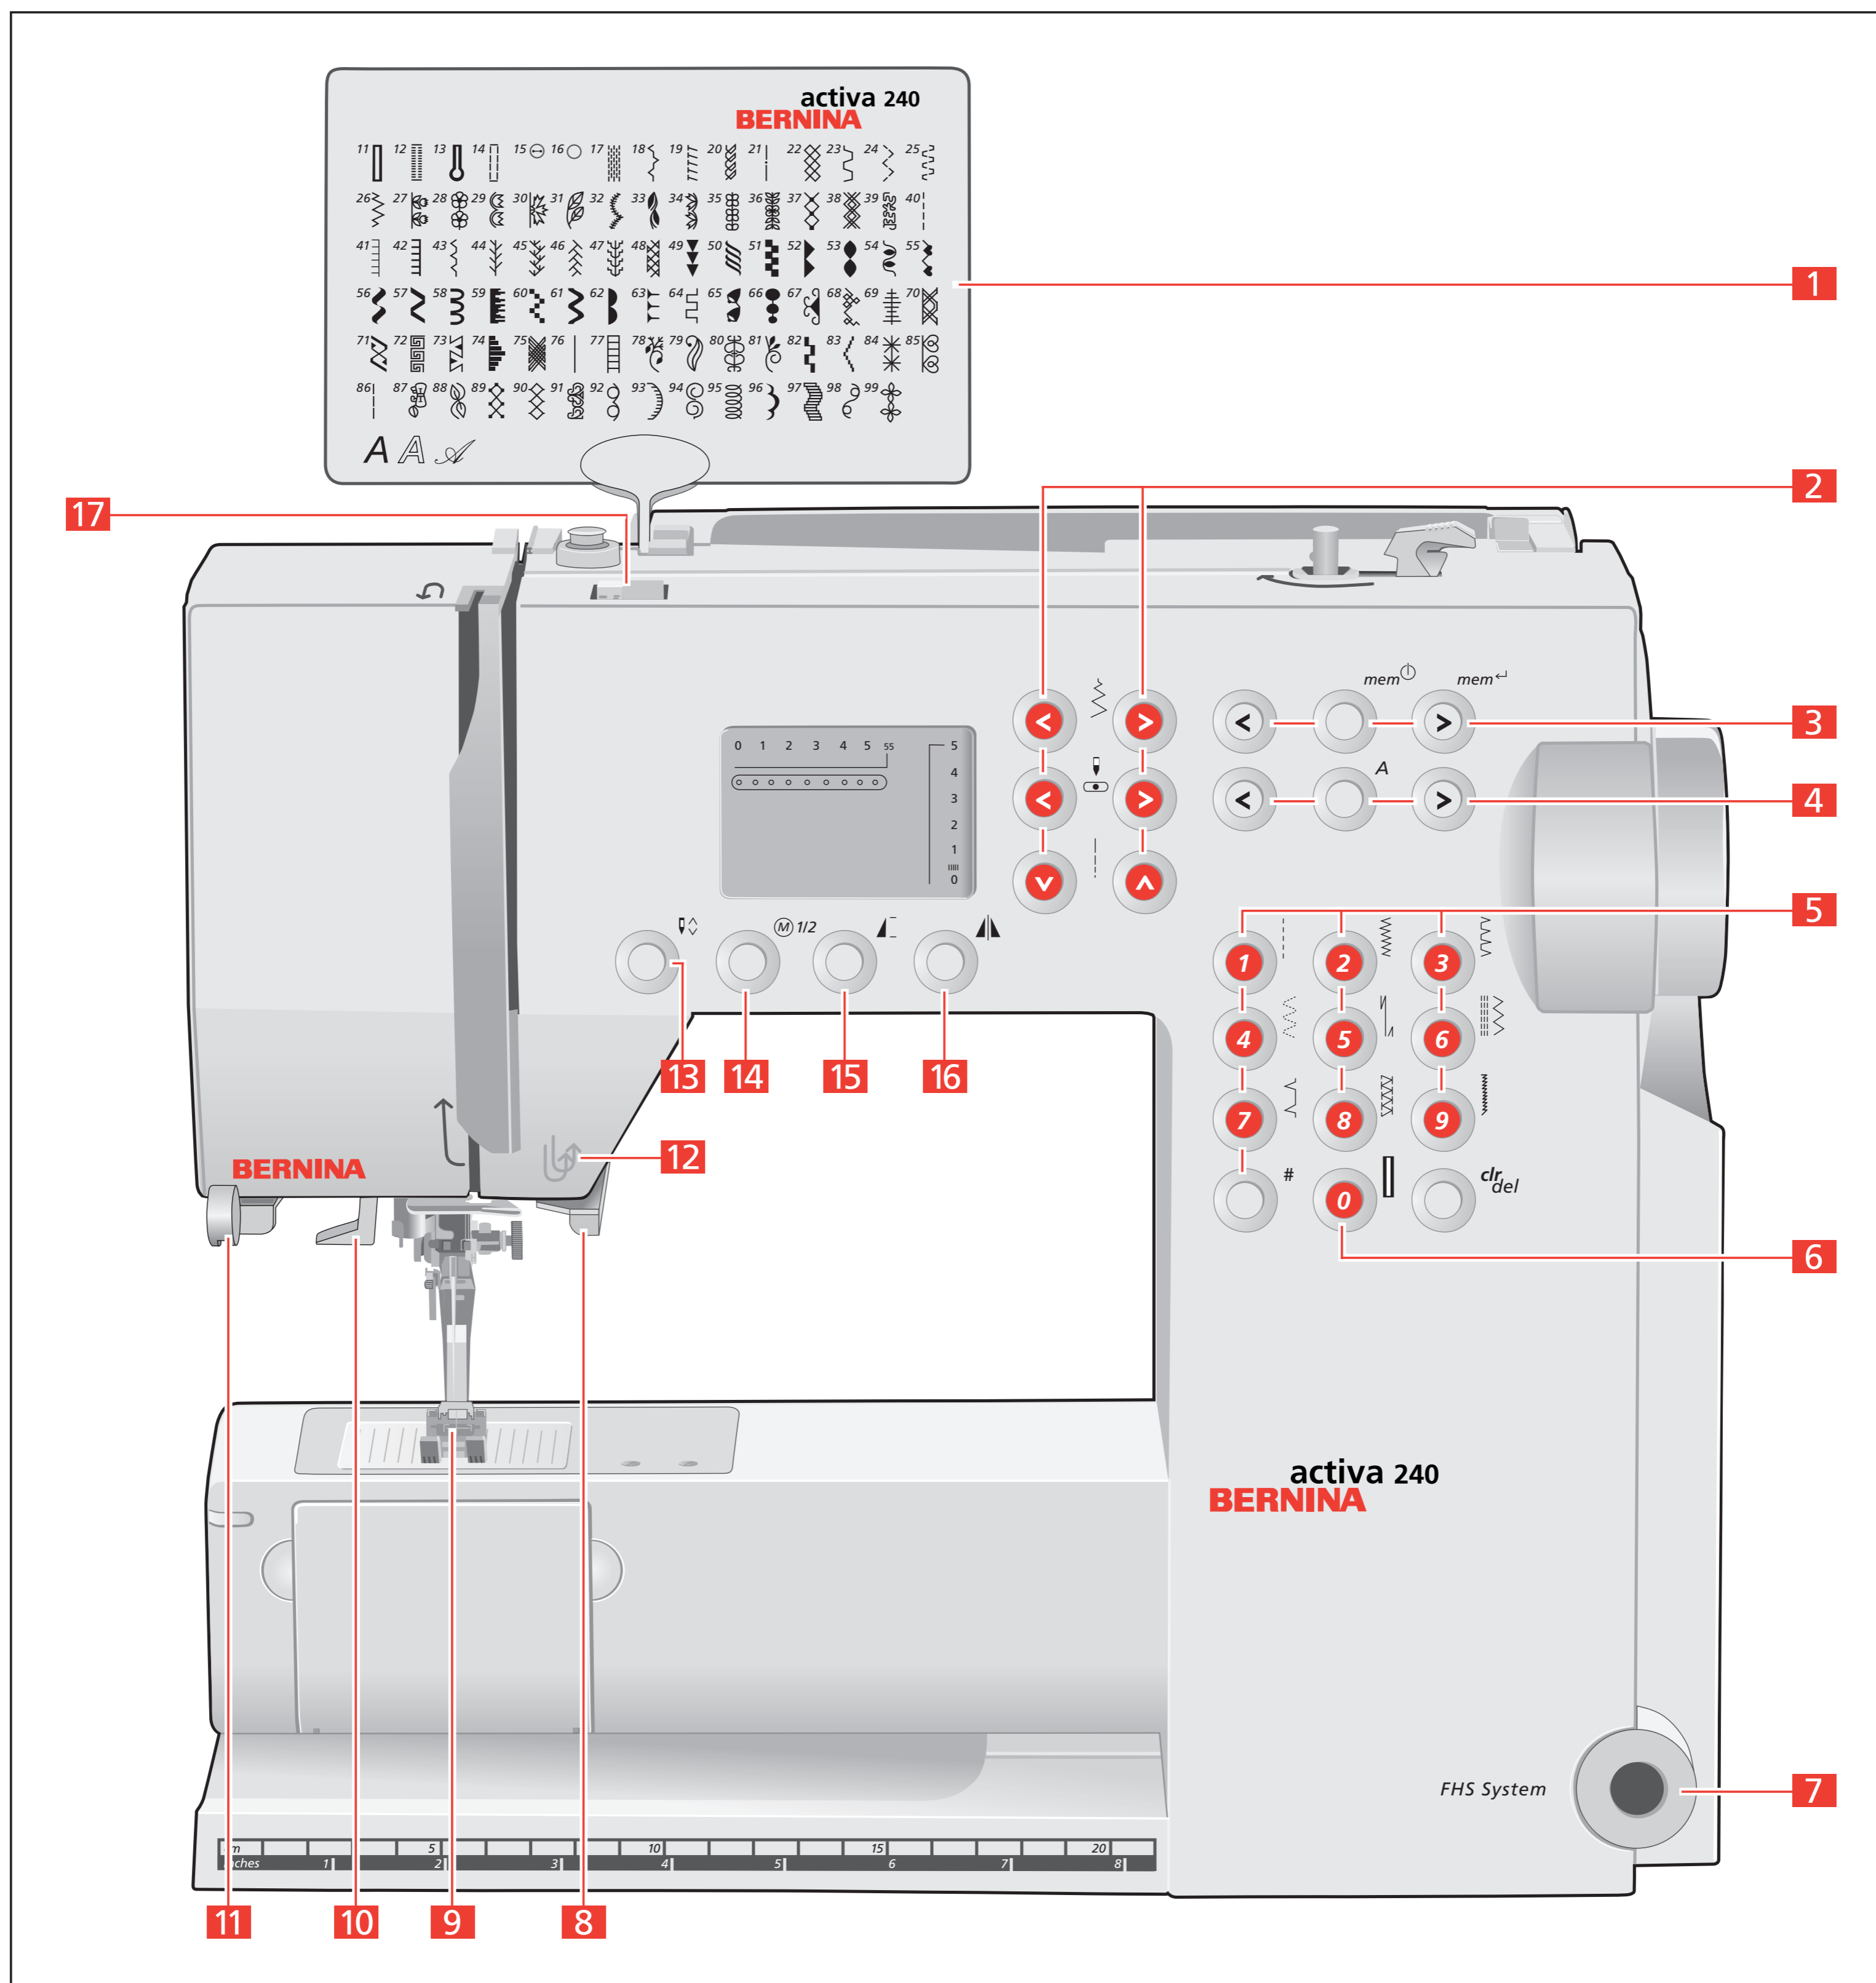

- |   |   |
|---|---|
| <b>1</b> Stitch card                                | <b>10</b> Threader  |
| <b>2</b> Stitch width/Needle position/Stitch length | <b>11</b> Magnifying glass holder (for optional lens set) |
| <b>3</b> Memory                                     | <b>12</b> Quick reverse button                            |
| <b>4</b> Alphabet selecting buttons                 | <b>13</b> Needle stop up/down                             |
| <b>5</b> Stitch selection buttons                   | <b>14</b> Half motor speed                                |
| <b>6</b> Standard buttonhole                        | <b>15</b> Pattern end button                              |
| <b>7</b> Free Hand System FHS                       | <b>16</b> Mirror image                                    |
| <b>8</b> CFL sewing light                           | <b>17</b> Thread tension adjusting wheel                  |
| <b>9</b> Presser foot                               |   |