
# **Double Fold Binder Attachment**

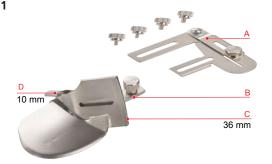











## Information

## Purpose

• For binding fabric edges with unfolded bias or jersey tapes of 36 mm width.

#### For your safety

Before using this accessory, please read the instruction manual at hand as well as the instruction manual of your machine carefully.

#### Overview

- А Accessory holder (not included in the scope of delivery)
- В Connecting piece with locking screw
- С Tape guide (36 mm)
- D Tape outlet channel (10 mm)

## Application

### How to prepare the Binder Attachment

- > Select the stitch. (Coverstitches No. 21, 22, 23 / Chainstitches No. 16 with LC)
- > Thread the machine.
- > Attach the presser foot. (#C13 for Coverstitch and Chainstitch)
- > Attach the Binder Attachment with accessory holder to the machine. Refer to the instruction manual of the accessory holder.
- > Loosen the locking screw of the connecting piece, position the Binding Attachment in front of the left coverstitch needle (LC) and tighten the screw again.
- > Loosen the locking screw on the swivel arm, position the Binder Attachment as close as possible to the presser foot tip and tighten the screw again.
  - The Binder Attachment and the presser foot are close to each other without direct contact.

#### Sewing on the bias tape

- > Cut the end of the tape into a point. (Fig. 2)
- > Swinging out the Binder Attachment.
- > Push the tape tip through the tape guide until the tape comes out folded approx. 3 cm at the tape outlet channel. (Fig. 3)
- > Bring the Binder Attachment into sewing position and lower the presser foot onto the tape.
- > Sew a few stitches to fix the tape. (Fig. 4)

BERNINA International AG | CH-8266 Steckborn Switzerland | www.bernina.com | © Copyright by BERNINA International AG

1052185 00 04



1062185.00.04 2021-07 EN

5

2



- > Check the seam position of the binding and, if necessary, adjust the position of the Binder Attachment by adjusting the locking screw on the connecting piece.
  - Sew on the tape close to the tape edge.
- > Push the edge of the fabric firmly to the right into the Binder Attachment and continue sewing. (Fig. 5)
- The fabric edge lies in the tape fold.