Sewing



Home



Setup Program



Tutorial



Creative Consultant



Help



ECO



Deleting settings



Upper thread tension



Needle selection



Presser foot display/Presser foot selection



Presser foot pressure



Stitch plate selection



Feed dog up/down





Filling level of bobbin thread



Stitch pattern selection by number



Practical stitches



Decorative stitches



Alphabets



Buttonholes



Quilt stitches



Personal memory



History



Information



Close



Confirm



Cancel



Needle position up/down



Pattern repeat



Long stitch



Mirror image left/right



Mirror image up/down



Editing stitch pattern length



Stitch counter function



Balance



Changing sewing direction



Permanent Quick reverse



Backstepping



Saving stitch pattern settings



Back to basic setting



Stitch counter buttonhole

16.0	Adjusting the buttonhole length		Select all points
man	Manual buttonhole	•	Selecting from a particular point
0.6	Buttonhole slit width	••	Single point is selected
	Selecting kind of tapering	9 mm	Limiting pattern width
A AA	Altering size of monogram		Moving the view of the stitch pattern
A A	Altering font size	+	Relocating points/Direct point selection
	Editing the combination at cursor position	~_	Inserting/Editing a stitch
	Deleting	3/3	Scrolling through points
	Editing the whole combination	V	
<u> </u>	Subdividing the combination		Creating a new stitch pattern
v v	Interrupting the combination		Triple stitch
<u>න</u> -	Securing		Duplicating
<u> </u>	Pattern repeat	(c)	Reversing the stitch sequence
	Matching width within the combination	•	Virtual sewing out
	Matching length within the combination	:5:	Engaging at the grid
+	Relocating stitch pattern	+	Combi mode/Single mode
•••	Relocating single patterns or selctions of a combination	K	Edit mode/Extended Edit mode
	Stitch Designer		Matching the stitch pattern size with the display