

# Bulky Overlock Foot #12/12C

Bulky Overlock Foot #12/12C was originally designed for stitching heavy sweater knits into garments. The overcast seam allowances formed a thick ridge that did not feed smoothly under a regular presser foot. Foot #12 has a tunnel or groove on the bottom of the sole that allows the knit seam allowances to feed easily under the foot as the seams are stitched.


The most common use for this foot today is making custom piping to accent seams and edges of garments, pillows, purses, and other custom made projects.



The tunnel on the sole of Foot #12/12C holds the piping in place as it is being stitched. This foot is also great for couching cording and attaching strands of beads.



## 3-Step Piping

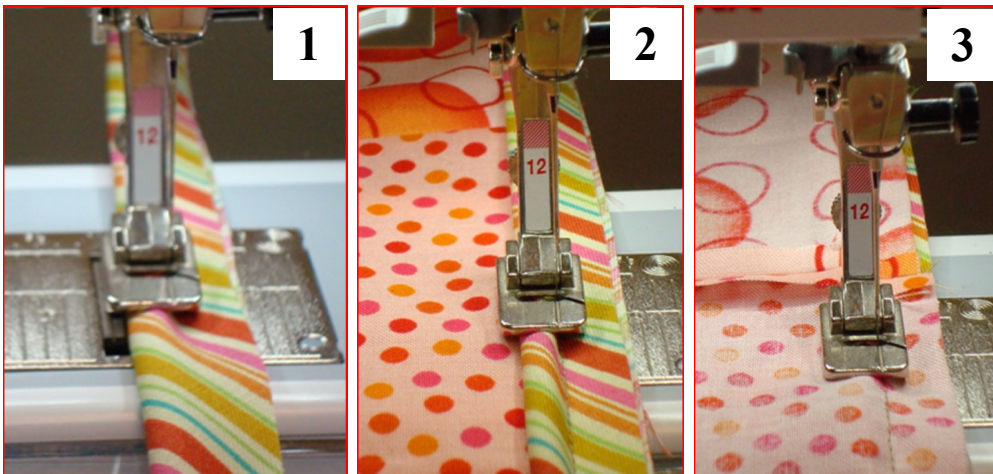

1. Cover the filler cord.
2. Attach the piping.
3. Sew the seam